User Guide



P C

16.8

26.2


4

D

2. Dimmer wiring diagram

European Rotary LED Dimmer-Zigbee Item NO.: D688-ZG



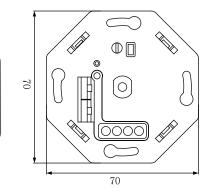



Min. brightness adjustable
 Max. brightness self-adjust
 Soft start protection

④ Work without neutral wire
⑤ Turn-off & power cut memory
⑥ Recoverable type OT OL & SC protection

1. Technical Data

Model No.		D688-ZG
Description		European Rotary LED Dimmer-Zigbee
Input Voltage		220-240V
Input frequency		50Hz
Load	LED Incandescent	RL: 10-150W RC: 5-250W 5-250W
	Halogen	5-250W
Dimming mode		Trailing Edge & Leading Edge
Control Way		Multiway
Material	Heatsink	Aluminum
	Bottom Case	PC
Color		White
Weight(g)		63.2
Dimension(mm)		70*70*43mm

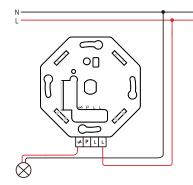

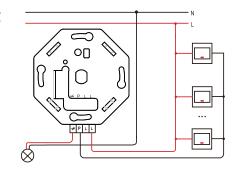

3. Operation and function

Turn on/off	Short press the push button to power on or off
Dimming function	Long press the push button to gradually min. or max. the brightness.
Minimum brightness fine-tuning setting	Rotate clockwise for fine adjustment, and the brightness of the light gradually increases; Rotate counterclockwise to gradually reduce the brightness of the light
Turn off the lights memory	1.After turning on, adjust the light to any brightness value, stop for 2 seconds, and then press the switch to turn off the device.
0 ,	2.After shutting down for 2 seconds, press the switch to turn on the device.
Reset	1. Press and hold the device reset switch for more than 5 seconds, and the red indicator light will remain on, indicating a successful reset.
	2. Short press the button three times within 1.5 seconds to disconnect from the network. During the process, the purple indicator light will illuminate for 1 second each time. If it stays on for 10 seconds, it indicates success. If it flashes three times, it indicates failure. After 30 seconds, it will time out.
	1. Open the "hue PHLIPS" app software;
Mobile App control	2. Click on "Settings" in the bottom right corner \rightarrow Hue Bridge \rightarrow Add Hue Bridge \rightarrow Find Hue Bridge \rightarrow set up \rightarrow Push notifications \rightarrow link \rightarrow Click the push link button on the Huebridge you want to connect to complete the connection;
	3. Short press the "reset" button of the dimmer twice, and the blue light will flash 1S/time. The blue light stays on for 10 seconds to indicate successful networking, flashes three times to indicate failure, and times out after 3 minutes;
	4. After the blue light stays on for 10 seconds, go to the "Settings" section of the app \rightarrow select "Light Settings" \rightarrow "Add Lamp" \rightarrow "Search" \rightarrow and finally "Add Lamp" to complete the process.
	5. After successfully accessing the network, the APP returns to the "Settings interface, selects the "Room and Area" option to enter a new interface, and then clicks "Create a" to enter the room settings interface. Click on the first column to enter the room name (can be default), and then select a new device that has been successfully connected to the network in the "Light Selection" below. Finally, click the "\" sign in the upper right corner of the interface to confirm the room creation.

4. WARNING

- a. Installation must be carried by a qualified electrician.
- b. Before installation, please check whether it conforms to local electric standards
- c. Power supply must be turn off when install and clean the dimmer.

Wipe the surface dust or dirt with soft cloth or tissue, do not use the detergent or other corrosive chemical solution.

- d. Please place and protect the cover properly when it's in installation to avoid the damage.
- e. There is no strong impact, vibration, electromagnetic field interference, corrosion, or dusty gas around the usage environment
- f. The product should avoid frost, condensation, water seepage, rain, etc.